

# Quick Start

## MV-TXS-SERVER Chassis

Congratulations on purchasing the MV-TXS-SERVER Chassis. Follow these configuration instructions to get started. If you need assistance please contact Sencore ProCare for technical assistance.

### 1 Contents

Unpack the MV-TXS-SERVER Chassis from the box and packaging materials it was shipped in. Verify the following items are present:


- MV-TXS-SERVER Chassis
- Line Cords x2

If any of these items are missing or damaged, please contact Sencore to obtain replacements.

### 2 Installation

1. Connect the line cord(s) and power on the unit.
2. Connect management port of computer to LAN port D of the MV-TXS-SERVER

#### MV 5000/TXS 8700 Port Designations

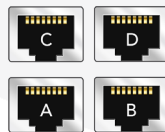

- A: Adapter\_0\_default\_vlan (Eth0)
- B: Adapter\_1\_default\_vlan (Eth1)
- C: Adapter\_2\_default\_vlan (Eth2)
- D: Adapter\_3\_default\_vlan (Eth3)

3. Connect multicast connectors to the remaining ports. Start with port A, then B, then C.

### 3 MV 5000/TXS 8700 Interface Access

1. Open a web browser and navigate to the default static IP address of port D, '192.168.4.1'.
2. From the web management interface, navigate to Device -> Network and optionally change unit IP address to desired settings.

### 4 Accessing the Manual

1. To access the manual via WebUI, click on the link titled "DOC" at the top right corner of the web page.