



Quick Start




SMD 989 DVB-S2 Modulator



Congratulations on purchasing the SMD 989. Follow these installation and configuration instructions to get started. Use the web interface for easiest configuration. If you need assistance please contact Sencore ProCare for technical assistance.

1 Contents


Unpack the SMD 989 from the box and packaging materials it was shipped in. Verify all of the following items are present:

- SMD 989 DVB-S2 Modulator
1x 
- Line Cord
1x 
- User Manual CD
1x 


If any of these items are missing or damaged, please contact Sencore to obtain replacements.

2 Installation

1. Secure the SMD 989 into the rack space.

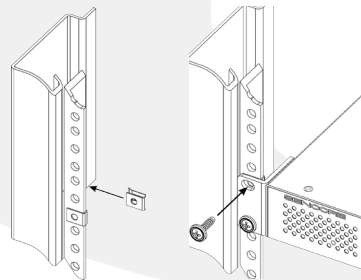



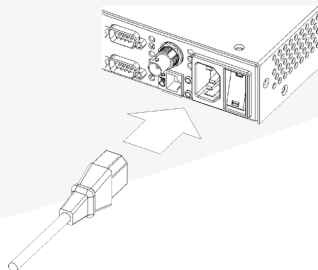

 




2. Make all appropriate I/O connections on the back of the unit.
3. Connect an Ethernet cable from a management network, to the Control port.
4. Connect the line cord.









3 Management Port






 








The SMD 989 can be managed through its web interface, SNMP or the front panel. To use the web GUI or SNMP, the management IP address must be configured. Contact your IT department if you are unsure of these settings.

1. Press any button on the front panel
2. Use  and  to move the cursor to "Admin," then press 
3. Use  and  to move the cursor to "Network," then press 
4. Use  and  to move the cursor to "Settings," then press 

DHCP IP Address Setup:

1. Use  and  to move the cursor to "DHCP," then press 
2. Use  and  to move the cursor to "Apply," then press 

Static IP Address Setup:

1. Use  and  to move the cursor to "Static," then press 
2. Use  and  to move the cursor to "IP Address," then press 
3. Use  and  to select the column to edit and use  and  to change the values, then press 
4. Use the procedure in the previous 2 steps to set the Subnet Mask and Gateway.
5. Once the IP Address, Subnet Mask, and Gateway have been set, use  and  to move the cursor to "Apply," then press 

Open a web browser (IE7 or above, Firefox 3.5 or above, Chrome) and type:
http://<IP Address> Default password is blank.