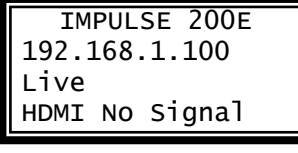
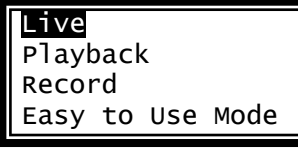
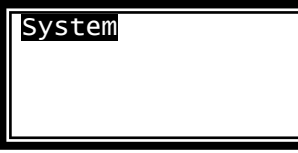

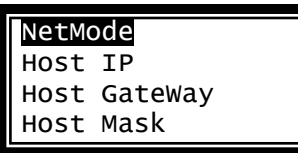



How to enable DHCP on the 200E using front-panel operation

The Impulse 200E can be configured to use DHCP to obtain an IP address/Subnet Mask/Gateway.

<p>1. The native screen on the Impulse 200E is the “Status” page. This will report the name of the unit, its current IP as well as the status of the input (used in tandem with the red/green LED light on the front panel).</p>	
<p>2. Press the MENU button to enter the page where settings can be viewed and configured.</p>	
<p>3. Use the ▲ and ▼ buttons to move the cursor to “System”, and then press the OK button to enter the system menu.</p>	
<p>4. Use the ▲ and ▼ buttons to move the cursor to “Network”, then press the OK button to enter the network menu.</p>	
<p>5. Use the ▲ and ▼ buttons to move the cursor to “NetMode”, then press the OK button.</p>	
<p>6. If the DHCP setting is currently set to “Disable”, press the OK button to enable DHCP.</p>	

Note: It may take up to a minute for the Impulse 200E to obtain an IP address.